


# **320 SOCKET INSTRUCTIONS**




DO NOT insert the drawer slides into the back socket beyond the slight bend as indicated by the arrows in the diagram to the right. There should be some space left between the end of the drawer slide and the back of the cabinet.

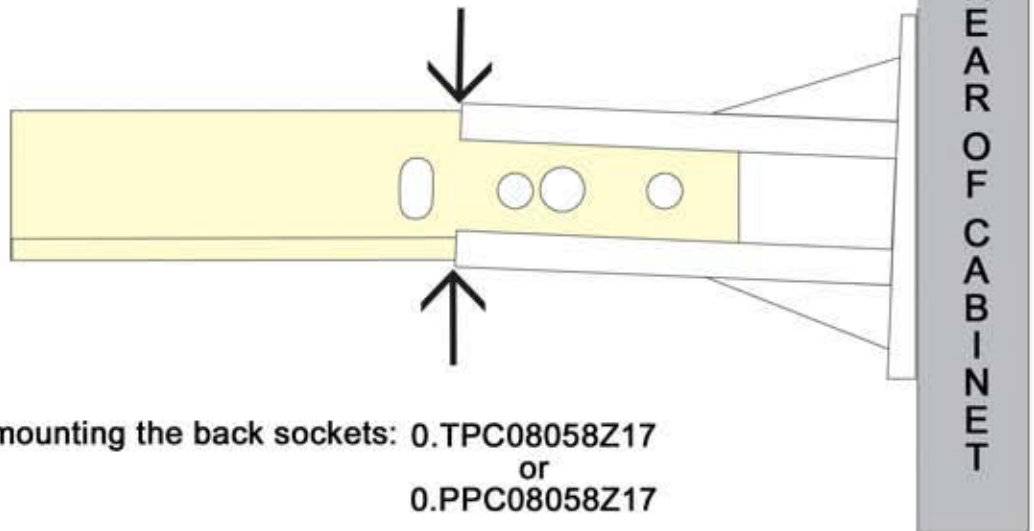

Recommended Screws for mounting the back sockets: 0.TPC08058Z17  
or  
0.PPC08058Z17

DO NOT insert the drawer slides into the back socket beyond the slight bend as indicated by the arrows in the diagram to the right. There should be some space left between the end of the drawer slide and the back of the cabinet.

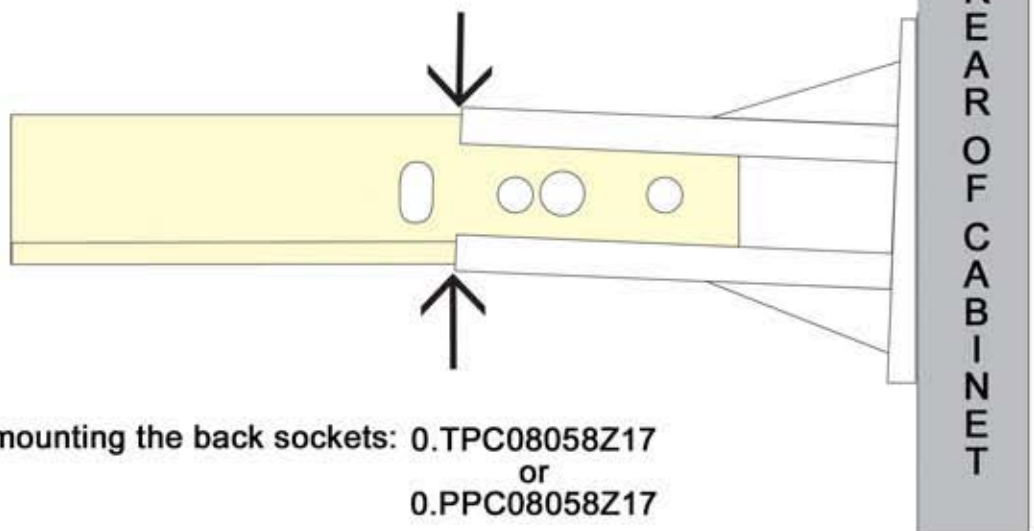

Recommended Screws for mounting the back sockets: 0.TPC08058Z17  
or  
0.PPC08058Z17