

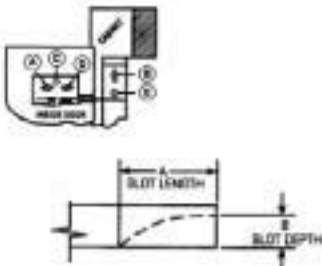
# **YOUNGDALE HINGES SPEC SHEET**



## STANDARD KNIFE & MIGHTY-MITE™ HINGE Selection Guide & Installation Details

Application	Std. Knife Hinge	Slot Depth	Slot Length	Mighty-Mite Hinge	Slot Depth	Slot Length
3/8" Lip Inset	#4 Examples	25/32"	1-9/16"	#38 Examples	25/32"	1-9/16"
1/4" Overlay - Low Profile	Not Available	-	-	#47 Examples	29/64"	1-9/16"
1/4" Overlay - Normal	Not Available	-	-	#49 Examples	37/64"	1-9/16"
5/16" Overlay - Low Profile	#3 Examples	29/64"	1-3/4"	#57 Examples	29/64"	1-9/16"
5/16" Overlay - Normal	#5 Examples	37/64"	1-3/4"	#59 Examples	37/64"	1-9/16"
1/2" Overlay - Low Profile	#65 Examples	29/64"	1-3/4"	#87 Examples	29/64"	1-11/16"
1/2" Overlay - Normal	#6 Examples	37/64"	1-3/4"	#89 Examples	37/64"	1-11/16"
5/8" Overlay - High Profile	#8 Examples	11/16"	1-3/4"	Not Available	-	-

 <p>For Standard Hinges use a 5" to 6-1/2"x9/32" Dado Blade</p> <p>For Mighty-Mite Hinges use a 4" to 5"x9/32" Dado Blade</p>	<p style="text-align: center;"><b>Standard Hinges</b></p> <p style="text-align: center;">Notch Doors as indicated</p> <p>Attach Hinges to the Door with 2 screws - use any 2 Holes.</p> <p>Attach Cabinet Door to Cabinet with a Single Screw</p> <p>Adjust Doors for Height &amp; Fit</p> <p>Install additional Screws as required</p> <p>Note: For Full-Wrap Hinges, no additional screws are needed. Non-Wrap Hinges require a second screw in the Cabinet Wing of the Hinge</p>	<p style="text-align: center;"><b>Mighty-Mite Hinges</b></p> <p style="text-align: center;">Notch Doors as indicated</p> <p>Attach Hinges to the Door with 2 screws - use the Slotted Holes.</p> <p>Attach Cabinet Door to Cabinet with a Single Screw</p> <p>Adjust Doors for Height &amp; Fit</p> <p>Install additional Screws as required</p> <p>Note: For Full-Wrap Hinges, no additional screws are needed. Non-Wrap Hinges require a second screw in the Cabinet Wing of the Hinge</p>
--	---	--